

2013-2016 Porsche Cayman Front Radiator Grill Installation Procedure

i Note: it is best to protect your paint with painter's tape during the installation procedure. Though not necessary if care is taken.

Note: Photos shown are of a Cayman S without parking sensors, Boxster installation is similar.

Procedure

1. Insert gill, outside of vehicle side first, with the top of the grill oriented towards the center of the car.



2. Cable ties are preinstalled for ease of installation. Insert hand into space above the middle rib. You will find that using your hand to guide the grill mesh up and to the outside of the car will assist with installation. Do not force the grill. Once the grill is inserted, you will be able to rotate the side in your hand into the cavity of the radiator intake.




3. The cable ties can be hidden if you would like. The middle bar is two pieces. You can split the bar a part and you will slip the cable ties in between. The receiving end of the cable tie will be on the bottom of the lower bar.





4. Pull the grill towards the front opening and align as you see fit. Insert the cable ties as shown.



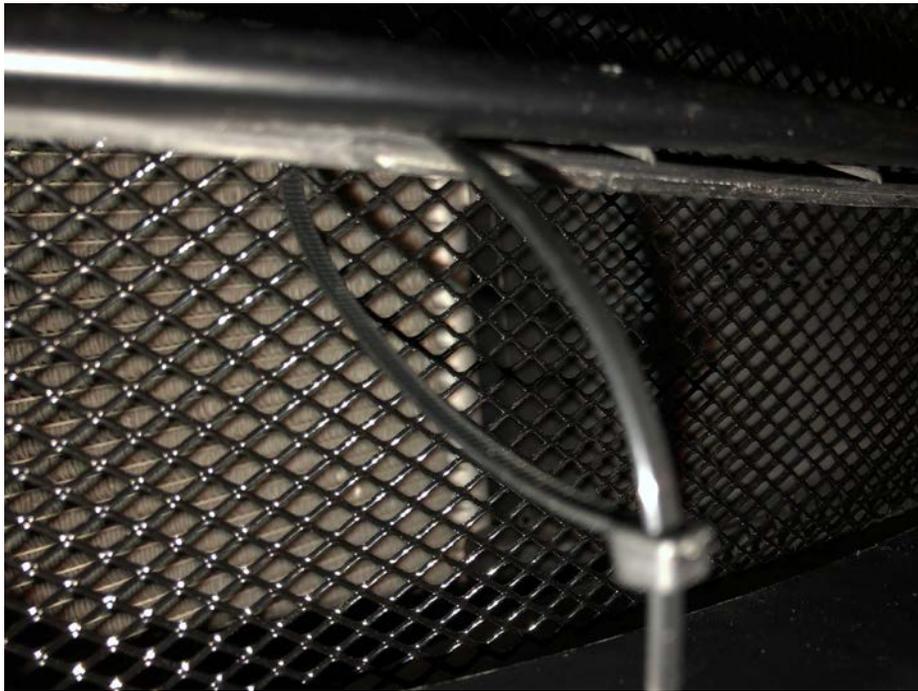

5. Should look like the photo below. Then using a side cutter, clip off the extra cable tie tail.



6. Enjoy the finished product! Please post up reviews if you are happy with the look of the product!!

